



## Keys Doors

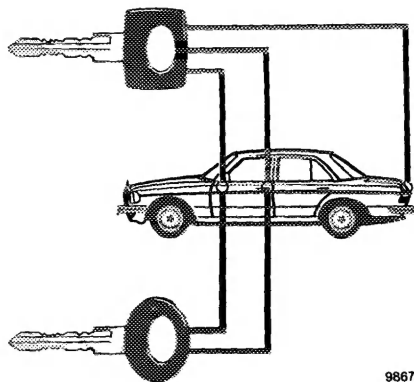

9867

**Master Key** — square-head — fits all locks on the car.

**Supplementary Key** — rounded head — fits only the door locks and the steering lock. This key is intended to be used whenever the car is left with an attendant. Be sure to lock glove compartment and trunk with the master key.

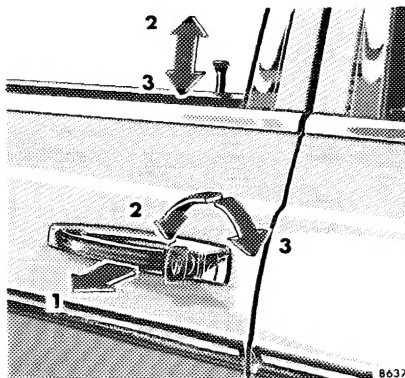

8637

Sedan


### Opening the Doors

From outside: pull handle outwards (1).  
From the inside: pull handle in door trim panel.

### Locking and Unlocking of Doors

From the outside: turn key.  
From the inside: actuate safety plunger (sedan) or safety lever (coupé).

- 2 Unlocking
- 3 Locking

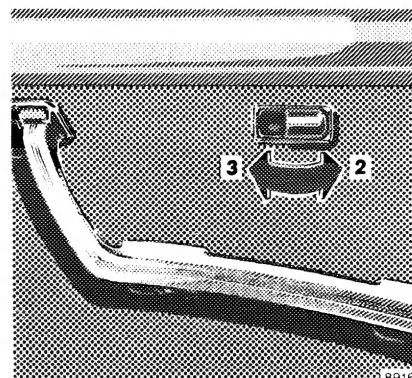

8916

Coupé

When the rear door plunger's are pushed down the rear doors cannot be opened from the outside or the inside. They can only be opened after pulling plungers up.

The driver's door can be locked only if it is closed and the door lock has properly engaged.